



# OPERATING INSTRUCTIONS



**SZ-7511-WV**

## Instructions :

The SZ-7511-WV are aesthetically superior versions of their predecessors. The SZ-7511-WV is a single set point controller It is specifically designed for refrigeration applications wherein the compressor cuts off at set point and is restarted at a temperature of set point plus differential.

Additionally these controllers offer several protection features that are easily understood by the examples in the instructions below. The controller can be used for heating applications, when the P1 parameter is set to "1".

A number of parameters are displayed alphanumerically to set up the instrument for each specific application.


The SZ-7511-WV controller can be used for several applications with a measuring range from -40°C to 99°C (1°C Resolution) or -40.0°C to 50.0°C (0.1°C Resolution)

1

## INDEX

Para.	Page	Description
	3	To set the SET Point of the controller.
	4	How to set other parameters.
P1	5	To set Heating or Cooling function.
P2	6	Max High Temp limit.
P3	7	Min Low Temp limit.
P4	8	To set Differential (Hysteresis).
P5	9	Probe calibration.
P6	10	Time Delay (relay restart after cutoff)
LP	11	Keypad lock.
E1	12	Relay status on probe failure.
PO	13	To enable/disable power switch.
RS	14	To change the resolution.
FS	15	Restore factory defaults.
EP	16	End Programming.
	17	Operating messages.
	18	Technical Data.
	19	Suggested Wiring diagram.

2

Set point	Function: To set the cut out point of the controller.
Press and hold the SET key for 2 Seconds.	Display will change to set value. The set point value can now be changed by using the UP/DOWN key. After setting the desired value, press the set key and you will see "--" which confirms that the set point has been stored in memory.
	
<b>RS = 0</b>	
Min	Max
P3	P2
0.0°C	
<b>RS = 1</b>	
Min	Max
P3	P2
0°C	

3

## To set other Parameters.

Press & hold the DOWN(prg) key for 2 seconds.



Display will show P1 & flash. To go to other parameters, use UP/DOWN keys.

4

<b>P1 Parameter</b>			Function: To set controller for heating or cooling.
To change the P1 parameter, press the SET key.			Use UP/DOWN keys to get desired value & press set to confirm.  0: Cooling mode 1: Heating mode.
<b>RS = 0 / 1</b>			
Min	Max	Fac.	
0	1	0	

5

<b>P2 Parameter</b>			Function: To set maximum allowable high temperature limit.
To change the P2 parameter, press the SET key.			Use UP/DOWN keys to set desired value. Once set at a particular value, this will not allow the set point to go above this value.  <b>Example</b> : Setting this parameter at 25.0°C will not allow the set point to go above 25.0°C. Also, if the temperature reaches 25.0°C, the display will show Ht (High Temp.) indicating that the temperature has gone above the value in this parameter.
<b>RS = 0</b>			
Min	Max	Fac.	
XX°C	50.0°C	50.0°C	
<b>RS = 1</b>			
Min	Max	Fac.	
XX°C	99°C	50°C	
XX = Set Point			
<b>Ht</b>			
(Message on display)			

6

<b>P3 Parameter</b>			Function: To set minimum allowable low temperature set point.
To change the P3 parameter, press the SET key.			Use UP/DOWN keys to set desired value. Once set at a particular value, this will not allow the set point to go below this value.  <b>Example</b> : Setting this parameter at -30.0°C will not allow the set point to go below -30.0°C. Also, if the temperature reaches -30.0°C, the display will show Lt (LowTemp.) indicating that the temperature has gone below the value in this parameter.
<b>RS = 0</b>			
Min	Max	Fac.	
-40.0°C	XX°C	-40.0°C	
<b>RS = 1</b>			
Min	Max	Fac.	
-40°C	XX°C	-40°C	
XX = Set Point			
<b>Lt</b>			
(Message on display)			



7

<b>P4 Parameter</b>			Function: To set the differential.
To change the P4 parameter, press the SET key.			Use UP/DOWN keys to set desired value. Differential between cut out and cut in temperature can be set between 1°C to 20°C when RS = 1 or from 0.1°C to 20.0°C when RS = 0.  <b>Example</b> : If the set point is set at 10.0°C and differential is set at 2.0°C, then when the system reaches 10.0°C, the relay will cut out. Since the differential is 2.0°C, the relay will cut in (restart) at 12.0°C (10.0°C+2.0°C).
<b>RS = 0</b>			
Min	Max	Fac.	
0.1°C	20.0°C	2.0°C	
<b>RS = 1</b>			
Min	Max	Fac.	
1°C	20°C	2°C	


8

<b>P5 Parameter</b>			Function: To set probe calibration.
To change the P5 parameter, press the SET key.			Use UP/DOWN keys to set desired value. In time it may be possible that the display may be offset by a degree or so. To compensate for this error, you may need to add or minus the degrees required to achieve the correct temperature. Setting value is from -10°C to 10°C when RS = 1 or from -10.0°C to 10.0°C when RS = 0.  <b>Example</b> : The temperature on the display is 28.0°C, whereas the actual temperature is 30.0°C. You will need to set the P5 mode to 2.0, which means that once out of the programming mode, the temperature will show 30.0°C (28.0°C + 2.0°C).
<b>RS = 0</b>			
Min	Max	Fac.	
-10.0°C	10.0°C	0.0°C	
<b>RS = 1</b>			
Min	Max	Fac.	
-10°C	10°C	0°C	

9

<b>P6 Parameter</b>			Function: To set time delay between relay restart time.
To change the P6 parameter, press the SET key.			Use UP/DOWN keys to set desired value. This parameter is used to protect the compressor from restarting in a short period of time and can be set between 0 to 99 minutes.  <b>Example</b> : If this parameter is set at 3 minutes, the relay will cut off at the set temperature, but will not restart for a minimum of 3 minutes, even if the differential is achieved earlier. This parameter is good to protect the life of the compressor when there are power fluctuations and the compressor is switched off and on within a few seconds.
Min	Max	Fac.	
0 Min	99 Min	3 Min	
  Flashing Time delay in progress			

10

<b>LP Parameter.</b>			Function: To lock keypad.
To change the LP parameter press the SET key.			Use UP/DOWN keys to set desired value. This parameter can lock the keypad so that tampering is not possible by by-standers.
<b>RS = 0 / 1</b>			0 = keypad unlocked 1 = keypad locked
Min	Max	Fac.	When locked all parameters can only be viewed, but not modified.
0	1	0	
			

11

<b>E1 Parameter</b>			Function : Relay status on Probe Failure.
To change the E1 parameter press the SET key.			Use UP/DOWN keys to set desired value. When set to 0 = Relay status is ON. 1 = Relay performs a duty cycle 10 minutes ON and 4minutes OFF. 2 = Relay status is OFF.
<b>RS = 0 / 1</b>			
Min	Max	Fac.	
0	2	1	

12

<b>PO Parameter</b>			Function : To enable/disable Power Switch.
To change the PO parameter press the SET key.			Use UP/DOWN keys to get desired value & press SET key to confirm.
<b>RS = 0 / 1</b>			0 = Disable power switch 1 = Enables power switch
Min	Max	Fac.	Controller has power switch, which if enable puts controller in active or stand by state. If press for 2 seconds controller will go in stand by mode, display will show "OF". To again switch to ACTIVE WORKING MODE, press power switch again for 2 seconds. All leds and 7-segment display will flash and enter into NORMAL WORKING MODE.
0	1	0	

13

<b>RS Parameter</b>			Function : To change the resolution.
To change the FS parameter press the SET key.			Use UP/DOWN keys to set desired value. If this parameter when set to 0,it will take all parameter in 0.1°C resolution. If this parameter when set to 1,it will take all parameter in 1°C resolution.
<b>RS = 0 / 1</b>			Note : Temperature and parameter will also change accordingly.
Min	Max	Fac.	
0	1	0	

14

<b>FS Parameter</b>			Function : To restore default settings of the controller.
To change the FS parameter press the SET key.			When set to 1 all parameters are programmed to factory values. Useful to debug setting related problems.
<b>RS = 0 / 1</b>			
Min	Max	Fac.	
0	1	0	

15

<b>EP Parameter</b>			Function: To end programming.
To end programming press the SET key			Once the SET key is pressed, the control goes into the normal mode and displays the temperature and all settings are recorded.

16

Operating messages and Icon status		
Message	Description	Parameter
Ht	Temperature above the maximum limit of the set point.	P2
Lt	Temperature below the minimum limit of the set point.	P3
PP	Probe short circuit, circuit open or without probe, or temperature > 99°C or < -40°C when RS=1 and temperature > 50.0°C or < -40.0°C when RS=0.	
☼ ● On/Off	Comp. Relay ON/OFF.	SP, P4
☼ Flashing	Time delay in progress	P6
💡 ● On/Off	Light Relay ON/OFF.	
🔒 ● On/Off	Keypad locked/unlocked	LP


17

Key Introduction		
⬆	<b>UP Key</b>	Used in program mode and set mode to increment parameter value. If press UP key once Light Relay & LED will become ON and If press again once Light Relay & LED will become OFF.
⬇	<b>Down Key / Program Key</b>	Used to enter into the program mode. Also used as Down key to decrement parameter value in program mode.
🔌	<b>Power Key</b>	Used to switch ON the controller.
SET	<b>Set Key</b>	Used in program mode to set/save the changed value of parameter.


18

Technical data:	
<b>Housing</b>	: White, ABS Plastic
<b>Front Cover</b>	: Red Polycarbonate plastic.
<b>Dimensions</b>	: Front : 80 X 126 mm, Depth : 15 mm.
<b>Mounting</b>	: Wall Mount.
<b>Connections</b>	: Screw terminal blocks. ≤ 2.5sqmm one wire/terminal only
<b>Display</b>	: 3 X14.2 mm (0.56") LED
<b>Data storage</b>	: Non-volatile EEPROM memory
<b>Power input</b>	: 230Vac +/-15%,50-60Hz. Other on request.
<b>Operating temp.</b>	: 5°C to 50°C(non-condensing).
<b>Storage temp</b>	: -20°C to 70°C(non-condensing).
<b>Output :</b>	
<b>Compressor Relay</b>	: 8 (3)A, 250Vac.
<b>Light Relay</b>	: 5A, 250Vac(res.)
<b>Input</b>	: NTC probe, SZ-N75.
<b>Range</b>	: -40°C to 99°C (1°C). -40.0°C to 50.0°C (0.1°C).
<b>Resolution</b>	: 1°C / 0.1°C.
<b>Accuracy</b>	: +/- 1°C.
<b>Probe tolerance at 25°C</b>	: +/- 0.3°C.

19

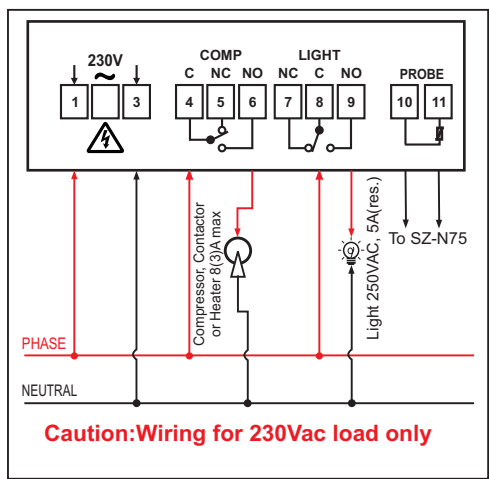

20

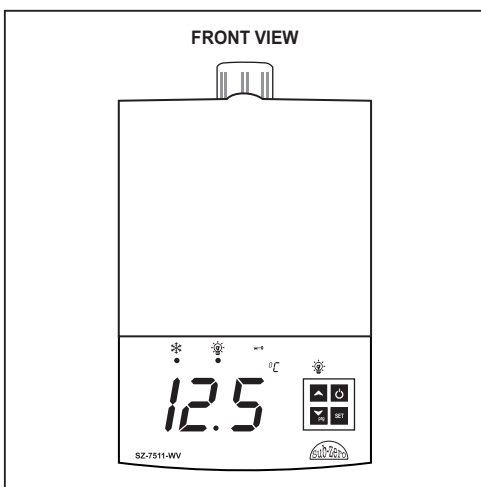

21

CAUTION	
<b>WIRING:</b>	The probe and its corresponding wires should never be installed in a conduit next to control or power supply lines. The electrical wiring should be done as shown in the diagram. The power supply circuit should be connected to a protection switch. The terminals admit wires of upto 2.5sq mm.
<b>WARNING:</b>	Improper wiring may cause irreparable damage and personal injury. Kindly ensure that wiring is done by qualified personnel only.
<b>Maintenance:</b>	Cleaning: Clean the surface of the controller with a soft moist cloth. Do not use abrasive detergents, petrol, alcohol or solvents.
<b>Notice:</b>	The information in this document is subject to change in order to improve reliability , design or function without prior notice and does not represent a commitment on the part of the company. In no event will the company be liable for direct, indirect, special, incidental or consequential damage arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages. No part of this manual may be reproduced or transmitted in any form or by any means without the prior written permission of the company.

22

**Disclaimer:** This manual & its contents remain the sole property of PVR Controls, India and shall not be reproduced or distributed without authorization. Although great care has been taken in the preparation of this document, the company or its vendors in no event will be liable for direct, indirect, special, incidental or consequential damage arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages. No part of this manual may be reproduced or transmitted in any form or by any means without the prior written permission of the company. PVR Controls, reserves the right to make and changes or improvements without prior notice.

**Warranty:** This product is warranted against defects in materials and workmanship for a period of one year from the date of purchase. During the warranty period, product determined by us to be defective in form or function will be repaired or, at our option, replaced at no charge. This warranty does not apply if the product has been damaged by accident, abuse, and misuse or as a result of service or modification other than by the company. This warranty is in lieu of any other warranty expressed or implied. In no event shall the company be held liable for incidental or consequential damages, including lost revenue or lost business opportunity arising from the purchase of this product.

#### OUR OTHER PRODUCTS



INDIA

Cold Room Controller  
Chiller Controller  
Two Compressors Controller  
Heating Controller  
Humidity Controller  
Pressure Controller



Ball Valves  
Globe Valves  
Hand Valves  
Flow Switches  
Solenoid Valves